


REPLACEMENT BATTERY INSTRUCTIONS



very gently turn the ferrule of the upper lens up to its full extension, without forcing when it is next to the limit.

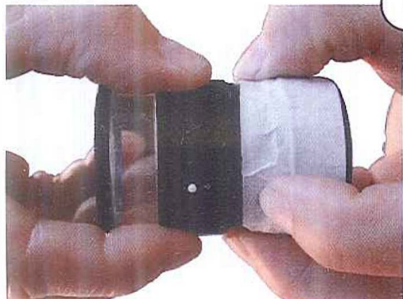

Fix the ferrule and the cylinder with scotch tape.



Unscrew the lower part, overcoming the initial resistance



With a small screwdriver remove the batteries on the lower part, then replace them, re-close the unit and remove the scotch tape.